

DEVANTI[®]

CERAMIC TOWER HEATER

INSTRUCTION MANUAL



CTH-B-2000-BK

This product is only suitable for well insulated spaces or occasional use

IMPORTANT SAFEGUARDS

1. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
2. Children should be supervised to ensure that they do not play with the appliance.
3. If the supply cord is damaged, it must be replaced by manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
4. **WARNING:** In order to avoid overheating, do not cover the heater.
5. The heater must not be located immediately below a socket outlet.
6. Do not use this heater in the immediate surroundings of a bath, a shower or a swimming pool.
7. Do not use this heater if it has been dropped;
8. Do not use if there are visible signs of damage to the heater;
9. Use this heater on a horizontal and stable surface.
10. **WARNING:** Do not use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.
11. **WARNING:** To reduce the risk of fire, keep textiles, curtains, or any other flammable material a minimum distance of 1 m from the air outlet.
12. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
13. Children of less than 3 years should be kept away unless continuously supervised.
14. Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have

been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.

15. CAUTION — Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.

16. Do not use the heater with a programmer, timer or any other device that switches the heater on automatically

- CAUTION: In order to avoid a hazard due to inadvertent resetting of the thermal cutout, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility.

•In order to prevent the risks of a fire, an electrical shock, burns and other injuries, it is imperative to observe basic safety measures when using electrical appliances.

•Please read the following information carefully before using the appliance for the first time for your own safety and to ensure correct use.

SAFETY INSTRUCTIONS

When using any electrically powered product, basic safety precautions should always be followed, including the following:




 
PLEASE READ ALL INSTRUCTIONS CAREFULLY BEFORE USING THE PRODUCT.

WARNING - to reduce the risk of fire, electrical shock or injury to persons or property:

1. Always operate the product from a power source of the same voltage, frequency and rating as indicated on the product identification plate.
2. Remove the unit from its packaging and check to make sure it is in good condition before using.
3. Do not let children play with parts of the packing (such as plastic bags)
4. Close supervision is necessary when the product is used by or near children or infirm persons. Do not allow children to use it as a toy.
5. Do not operate any product with a damaged cord or plug, or after the product malfunctions, or is dropped or appears damaged in any way. Return the complete product to the place of purchase for inspection, repair or replacement.
6. Before unplugging the power cord, be sure to turn the power off. When touching the unit, be sure your hands are dry to prevent electrical shock.
8. Ensure the cord is fully extended before use and arrange it so that it is not in contact with any part of the heater.
9. In use, some parts of the heater are hot. When moving, hold the heater only by the handle provided.

10. Do not use the heater in areas such as garages where petrol, paint or other flammable substances are used or stored.
 11. Do not use near or point the heater to furniture, animals, curtains or other inflammable objects. Keep combustible materials such as furniture, bedding and any other combustible materials at least 1 metre from the front and sides, and from the rear of the heater.
 12. Do not place the cord under carpet or cover with throw rugs or furniture. Arrange the cord so that it cannot be tripped over.
 13. Do not place the heater on bedding or on thick and long pile carpet where the openings may be blocked.
 14. To reduce the risk of electric shock, do not immerse or expose the product or flexible cord to rain, moisture or any liquid other than those necessary for correct operation of the product.
 15. This product should not be used in the immediate vicinity of water, such as bathtub, washbowls, bathroom swimming pool etc. where the likelihood of immersion or splashing could occur.
 16. Switch off and unplug from outlet when not in use, before assembling or disassembling parts and before cleaning. Remove by grasping the plug - do not pull on the cord.
 17. A common cause of overheating is deposits of dust and fluff entering the heater. Ensure these deposits are removed regularly by unplugging the heater, allowing it to cool and cleaning as described in the Care, Cleaning and Storage section.
 18. Be sure that no other high current appliances are plugged into the same circuit with your heater as an overload can occur.
 19. Avoid the use of an extension cord as the extension cord may overheat and cause a risk of fire.
 20. Do not use the appliance for other than its intended use.
 21. Do not use outdoors. FOR INDOOR USE ONLY.
 22. Do not leave the appliance unattended when switched on.
 23. Do not place objects on the product or allow objects to obstruct the inlet or outlet openings, or operate in close proximity to walls or curtains, etc. Do not cover the unit when in operation.
 24. Do not locate the heater immediately below a socket-outlet.
 25. The use of attachments or accessories not recommended or sold by the product distributor may cause personal or property hazards or injuries.
 26. This product is intended for normal domestic/household use only.
- Use this heater as described in this manual. Any other uses, not recommended by the manufacturer, may cause fire, electric shock, or injury to persons and may void the warranty.

USING THE HEATER

1. Before inserting the plug into an electrical outlet, make sure that the electrical supply in your area matches that on the rating label of the unit.
2. When plugged in, the ON/OFF symbol will light on.
3. When in Standby mode, only press  to start the heater.
 - (a) The default heating mode is High Heat, the symbol  will light on, the heater will heat continuously in High Heat power.
 - (b) ECO Mode (Press MODE to switch it, the symbol ECO will light on), the heater will heat in energy-saving mode.
 - (c) Fan Mode (Press MODE again to switch it, the symbol  will light on)
 - (d) Low Heat Mode (Press MODE once again to switch it, the symbol  will light on), the heater will heat continuously in Low Heat power.
- (c) TIMER: Press the button TIMER repeatedly to set a period after which the heater will turn itself off (From 0 hour - 9 hours, in 1 hour intervals).


Key lock function: Keeping Press TIMER button on top panel for 3s, the heater will be locked and can't be operated anymore, and the lock symbol will light on; Keeping press TIMER button again for 3s to release the children lock.


(d) Setting room temperature .Temperature setting from 15-35°C, the default setting temperature is 30°C.Press TEMP button to set the desired temperature, in this smart mode, the “TEMP” and “Mode” button will lights on, and the heater will now cycle on and off to maintain the set temperature automatically.

MOOD LIGHTS: there are three moods lights at top control cover, Blue color for Fan Mode, Purple color for Low power heat, Red Color for High power heat and ECO mode, you can turn-off the moods lights by remote control.

 
(e) ECO mode: the red color mood lights will go into breathing mode, and ECO symbol will light on. The heater will heating in cycle High Heat-Low Heat to maintain the room temperature around 24C. The heater will cut-off automatically if there is no further operation within 24 hours continuous working.

(f) Swing : Press OSC button to activate swing. Press it again to cancel.


(g) Press  to turn off the heater, The heater will continue to work in FAN mode for 15 seconds, allowing the product to cool.

* Keeping press  for 3s to turn off the LED display, press any button to light on again.

Touch Control Panel

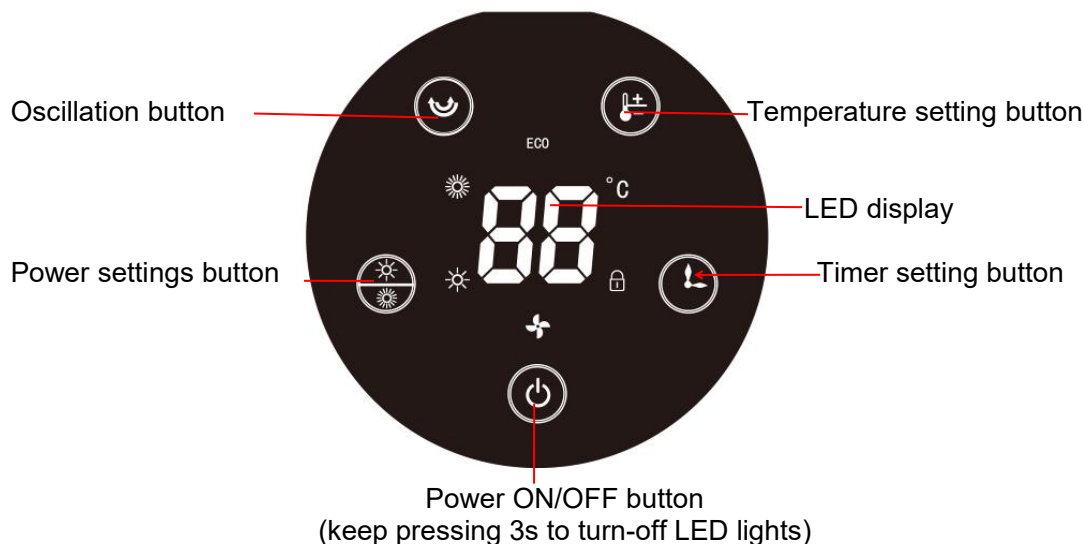

Remote Control

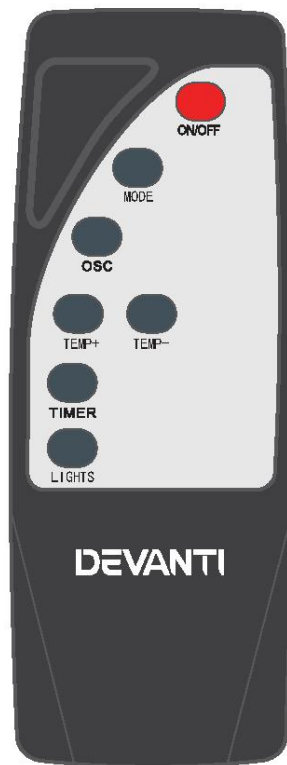 

OVERHEAT PROTECTION

This heater is protected with an overheat protection that switches off the appliance automatically in case of overheat, e.g. due to the total or partial obstruction of the grids. In this case, unplug the appliance, wait about 30 minutes for it to cool down and remove the object which is obstructing the grids. Then switch it back on as described above. The appliance should operate normally. Should the problem persist, please contact the nearest customer service.

NOTE: To assist in maintaining the internal components, after pressing the OFF button the fan will continue to blow room air for a period of 15 seconds before shutting down to standby.

SAFETY SYSTEM

- In the event of abnormal overheating, a safety device shuts down the appliance automatically. In this case, must unplug the heater, after a short cooling down phase, the appliance is ready for use again.
- If you still notice the same defect as above mentioned, remove the plug from the socket and consult your authorized dealer to your after-sales service department.
- During use, do not touch or cover the air outlet. This may cause the unit to over heat, and the safety device to operate.
- The unit is also fitted with a tip over switch, it will cut out the power automatically if tipped over.

MAINTENANCE



- Your appliance must be switch OFF via the main power supply and unplugged before proceeding with any cleaning work.
- Clean the housing with a lightly damp cloth, a vacuum cleaner or a dusting brush.
- Never use flammable or abrasive cleaning agents such as benzene or spirit to clean the appliance.
- Never immerse the appliance in water!
- Clean the air inlet and outlet regularly with a vacuum cleaner.
- If the appliance is not used for an extended period it must be protected against excessive dust and dirt. Please dismount the heater and store in a dry place away from sunlight and dirt.

SPECIFICATIONS

- Model: CTH-B-2000-BK
- Rating power : 2000W
- Voltage : 220-240V ~ 50-60Hz

-  Class II

CORRECT DISPOSAL OF THIS PRODUCT

 	<p>This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling. Please bring the batteries in the batteries disposal center (contact your retailer in order to protect the environment).</p>
--	--