

# DEVANTI®

## FAN HEATER



FH-A-1200-BK

**PLEASE READ AND SAVE THE INSTRUCTION MANUAL TO ENSURE THE SAFE AND EFFECTIVE USE OF THE APPLIANCE.**

## **Important Safety Instructions**

**Warning:** To avoid the risk of electrical shock, always make sure the products is unplugged from the electrical outlet before relocating, servicing, or cleaning it.

- This products is intended for indoor, non-commercial, household use for temporarily heating residential rooms. Do not use the product for any other purpose.
- Do not leave the product unattended while it is in use. Always unplug the product from the electrical outlet when it is not use.
- Keep the product out of the reach of children and pets. This product is not intended for use by children.
- Place the product on a flat, steady, stable, heat-resistant surface.
- This product hasn't any arcing or sparking parts inside. Do not use it in areas when gasoline, paint, or flammable liquids are used or stored, as there may be a risk of fire or explosion.
- Use the product in a well-ventilated area. This heater is hot when in use. To avoid burns, do not let bare skin touch a hot surface. If provided, use handle when moving this heater. Keep combustible materials, such as furniture, pillows, bedding, paper, clothes, and curtains at least 3 feet (0.9 meters) from all sides of the heater.
- Use this heater only as described in this manual. Any other use is not recommended by the manufacturer. As it may cause fire, electric shock, or personal injury.
- Do not insert or allow other objects to enter any ventilation of or exhausted opening as this may cause an electric shock, fire or product damage.
- To prevent a possible fire, do not block air intake or exhaust in any manner. Do not use on soft surface, such as a bed, where air outlet may become blocked.
- Wipe the air openings clean if they become clogged.
- Do not use this product to dry or heater clothing, shoes, pipes or any other items.
- This heater is not intended for use in bathrooms, laundry areas, or other damp/wet locations.
- Never place the heater where it may fall into a bathtub or other water container.
- Plug the product into a standard AC220-240V electrical outlet.
- Do not allow the power cord to hang (e.g. over the edge of a table or counter) or place/run the power cord under rugs, carpeting, or in crowd areas where it may be tripped over or pulled.
- To disconnect the product, turn the switch off first, and then remove the plug from the electrical outlet. Pull directly on the plug; do not pull on the power cord.
- Do not put any stress on the power cord where it connects to the product, as the power cord could fray and break.
- Do not plug or unplug the product from the electrical outlet with a wet hand.

- Keep the power cord and product away from heated surfaces
- Do not operate the heater with a damaged cord or plug, once malfunctions occurred, or has been dropped or damaged in any manner. Please seek help from professional service facility for examination, electrical or mechanical adjustment, or repair.

**CAUTION:** This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.


Children should be supervised to ensure that they do not play with the appliance.

### List of main parts

1. Operating panel
2. Indicator light:  
Three blue for only fan mode  
One red for half power  
Three red for full power
3. Air outlet Grill
4. Main power switch



### Operation panel

1. **8.8** : LED display
2. '+' : Temperature/Timer up
3. '-' : Temperature/Timer down
4.  : ON/OFF switch
5. 'Mode' :  
5.1 Quick press to choose Regular Fan/Warm Fan/Hot Fan  
5.1 Press 5s to set the timer
6. 'TURN' : Oscillation



## Technical Specifications:

Model Number	FH-A-1200-BK
Voltage	220-240 V ~ 50-60 Hz
Power	1200 W

## Operation:

1. Plug the power cord into a standard 220-240V AC electrical outlet.
2. Press “ON/OFF” button, the product is working on 1200W, the three red lights on.
3. Press “MODE” button to change the Fan mode – Regular Fan(three blue lights), Warm Fan(one red light), Hot Fan(three red light)
4. Press “TURN” button, the heater will turn automatically with an angle about 70°
5. Press “+” or “-” button, setting the temperature you need
6. Press “MODE” button for 5 seconds, display shows timer, press “+” or “-” button to set the timer you need to auto power off the heater(up to 9 hours), the display will shinning 5 times to finish the setting.
7. This device has auto tip-over function, it will power off automatically if topple over.
8. This device has thermostat inside, it will stop heating if the heater is over heated, and will heat again after cooling down.

## MAINTENANCE AND STORING

1. Always be sure that the appliance is switched OFF before cleaning or attempting to store the item. Do not immerse heater in water or allow water to drip into the interior of the heater, as this could create an electric shock hazard.
2. Allow the product to completely cool before handling or cleaning it.  
Ensure the heat select knob is in the shutdown position and the power cord is unplugged from the electrical outlet before cleaning the product.

## STORING

When storing heater during the off season, be sure to store it in dry area. Wrap the power cord into a neat package. The power cord should not be in contact with sharp edges, and it should not be compressed by heavy objects. Store the cord in a clean, dry location always from metal objects. Always check the plug before use to assure metal items haven't become attached.

Do not place any heavy items on top of appliance during storage as this may result in possible damage of appliance.



- **Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities.**
- **Contact your local government for information regarding the collection systems available.**
- **If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being.**
- **When replacing old appliances with new ones, the retailer is legally obligated to take back your old appliance for disposals at least free of charge.**