

OPERATING INSTRUCTIONS

WASHING

1. Place the washing machine on a level surface near to a drainage point.
2. Open the top cover and turn the spin basket clockwise to release and remove.
3. Clip the water drainage tube to the right side.
4. Place the clothes in the washing machine.
5. Plug in the washing machine to a wall socket.
6. Fill the washing machine with warm water via the water inlet or directly into the machine with a water jug up to the water level mark. Ensure water temperature is not more than 40°C, or in the case of woollen materials, not more than 30°C.
7. Add washing powder to the water.
8. Set the washing time as desired.
9. When washing has been completed, release the drainage tube and drain water into a sink or suitable container.

RINSING

1. Clip the drainage tube to the side of the washing machine.
2. Re-fill washing machine with clean water to the water level mark.
3. Set the desired rinsing time.
4. When the cycle has been completed, release the drainage tube and drain the water.
5. Repeat the above steps if necessary.
6. Release the drainage tube.

SPINNING

1. Place wet clothes into the spin bucket. Split the load if necessary. Do not overload the basket. Maximum load is 2kg.
2. Place the plate over the clothes and press down to secure.
3. Place the spin bucket into the washing machine and turn the bucket anti-clockwise to click into position.
4. Set the desired spinning time.

MAINTENANCE

- When cleaning the housing of the washing machine, wipe out all dirt thoroughly and wipe the machine too.
- Store in a cool dry place.

SAFETY PRECAUTIONS

ELECTRICAL ITEM. PROTECT FROM RAIN AND WATER. DO NOT IMMERSE.

1. Water is not to enter the inner part of the washing machine directly to prevent any damage to the electrical components and motor.
2. When unplugging the machine from the wall socket, ensure that hands are dry.
3. To avoid plastic deformation, do not place heavy items or hot objects on top of the washing maching.
4. Do not use excessive amounts of washing powder as this will affect the washing results.
5. Water in the washing machine must not exceed 55°C.
6. If the power supply cord is damaged, it must be replaced by the vendor or similarly qualified service personnel in order to avoid any electrical hazard.
7. This product is not intended for use by persons with reduced physical, sensory or mental capabilities unless they have been given supervision or instructions concerning the use of the product by a person responsible for their safety.
8. Keep the machine away from direct sunlight and heating appliances.
9. If there is an excessive amount of water in the washing machine, the water will overflow.
10. Coloured clothes should be washed separately.
11. When washing woollen garments, please use a washing net bag and wash garments on their reverse side.

 
TROUBLESHOOTING

| PROBLEM | ANALYSIS/SOLUTION |
|--------------------------------|---|
| Washing machine is not working | Check that there is power supply. |
| | Check for any blown fuse. |
| | Check that power cord is connected to wall socket properly. |
| | Check the timer switch. |
| Water is not draining | Ensure that hose is kept down. |
| | Check for twisted hose or correct threshold height. |
| | Check for frozen hose. |
| | Ensure load capacity in not exceeded. |
| Washing strength is weak | Check that the V-belt is not too loose. |
| | Ensure that voltage is correct. |

SHOE BRUSH OPERATION

SHOE BRUSH INSTALLATION


Remove the screws from the impeller with a Philips-head screwdriver and keep the screw aside. Attach the shoe brush to the impeller as shown. Then replace the screw and fasten the assembly.

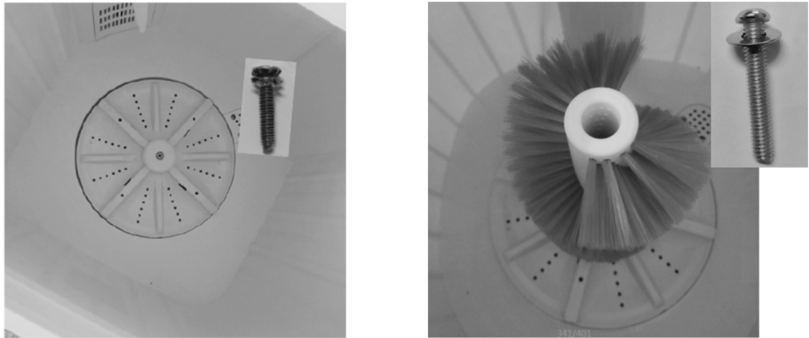

ATTENTION

1. Before washing the shoes, remove all shoe laces to prevent the laces from getting entangled with the brush or damaging the motor.
2. Add an appropriate amount of water relative to the size of the shoes. The water level should just cover the size of the shoes. Do not use excessive water as this will hamper the washing action.
3. Add in an appropriate amount of detergent.
4. Close the cover, plug in the washing machine to the wall socket and set up the timer.
5. When the timer duration ends, the washing machine will stop working.
6. Drain the water accordingly.
7. Repeat steps 1 and 2 if necessary. A long washing time is not recommended and it is best to keep the washing within 3 minutes per cycle for best results.
8. Do not place your hands into the washing machine while it is still in operation.
9. Clean the brush after use to maintain its effectiveness and washing performance.

 CIRCUIT DIAGRAM

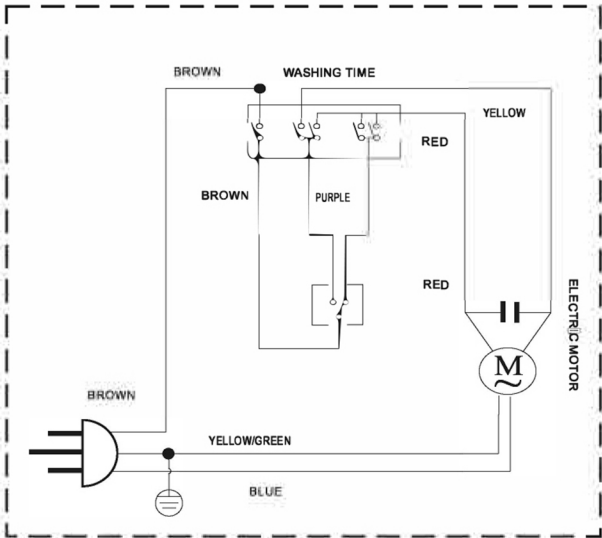

CAUTION

Before performing any repair or maintenance work, please unplug the washing machine from the wall outlet to avoid any hazards.

SPECIFICATIONS


| | | | |
|----------------------|-----------------|-----------------------|-------------------|
| Voltage | AC220-240V/50Hz | Maximum load capacity | 3kg |
| Washing input power | 240W | Weight | 6.5kg |
| Spinning input power | 120W | Dimensions | 395mmx395mmx555mm |

ACCESSORIES

- Inlet hose
- Spin basket
- Shoe brush
- Shoe brush screw

DEVANTI®

 PORTABLE WASHING MACHINE MODEL: PWM-S-30-BK

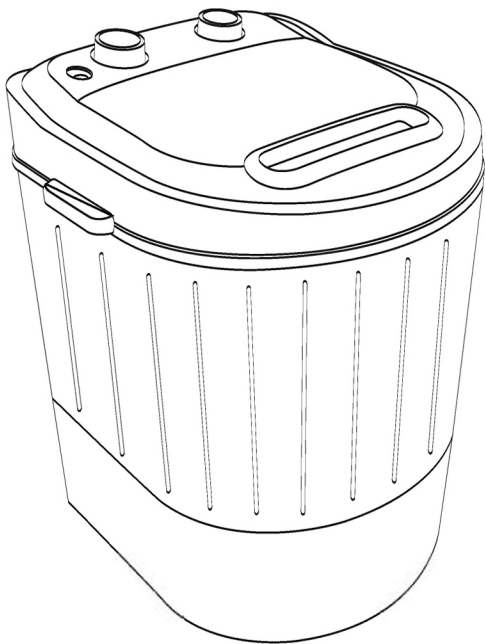

USER MANUAL

Please read this user manual carefully before using the product. Please retain this manual for future reference.



RoHS