

DEVANTI

ELECTRIC TOWEL WARMER

Model: TW-C-FW-10-ALUM



INSTRUCTION MANUAL

This towel warmer is intended for use in bathrooms or laundry areas.

READ THE INSTRUCTIONS CAREFULLY BEFORE OPERATING

OPERATING INSTRUCTIONS

- 1) Please read the installation instruction carefully to understand how to install your towel warmer.
- 2) Make sure to complete the installation. Press the switch to (0) position (Power indicator is off)
- 3) Plug the power cord into an electrical outlet.
- 4) Press the switch to (1) position (Power indicator lights up) , then the heater is start working.

MAINTENANCE

If the supply cord of this appliance is damaged, it must only be replaced by a repair shop appointed by the manufacturer or its agent, as special purpose tools are required.


WARNING

This appliance is intended only for drying textiles when washed in water.


TOWEL WARMER ARE ONLY ALLOWED TO BE INSTALLED AT A DISTANCE OF AT LEAST 0.6M FROM BATHTUBS AND SHOWERS.

INSTALLATION INSTRUCTION

1) For Free Standing

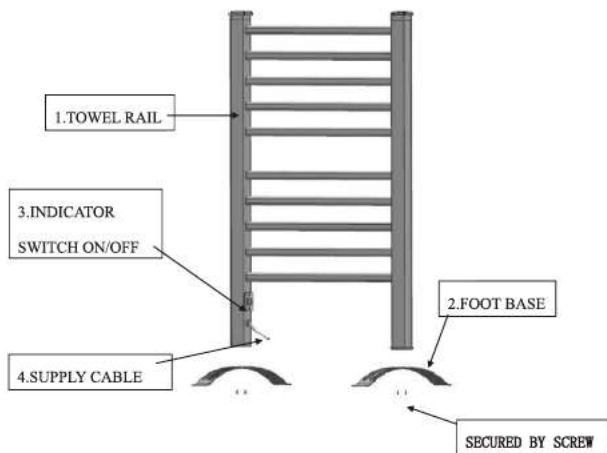

2) For Wall Mounted

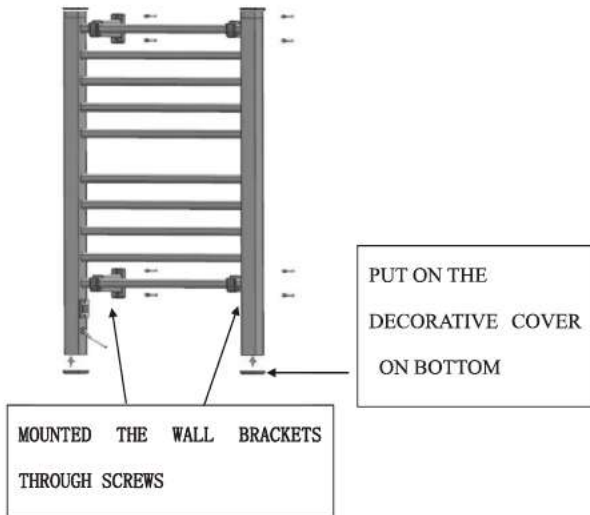

IMPORTANT SAFEGUARDS

- 1) Read all instructions before using this towel warmer.
- 2) Extreme caution is necessary when towel warmer is used by or near children or invalids and whenever the heater is left operating and unattended.
- 3) Always unplug heater when not in use.
- 4) Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner. Return heater to authorized service facility for examination, electrical or mechanical adjustment, or repair.
- 5) Do not use outdoors.
- 6) Never place the heater where it may fall into a bathtub or other water container.
- 7) Do not run cord under carpeting. Do not cover cord with throw rugs, or the like. Arrange cord away from traffic area and where it will not be tripped over.
- 8) To disconnect heater remove plug from outlet.
- 9) Do not use it in areas where gasoline, paints, or flammable liquids are use or stored
- 10) Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire electric shock, or injury to persons.
- 11) This heater is not intended for use an extension cord. Plug the cord directly into an appropriate wall receptable.
- 12) Your children should be supervised to ensure that they do not play with the appliance. SAVE THESE INSTRUCTIONS.

CAUTION:

- THIS HEATER ONLY OPERATES IN UPRIGHT POSITION .
- STORE THE HEATER IN COOL DRY LOCATION WHEN NOT IN USE .
- DO NOT STORE UNTIL THE HEATER HAS COOLED DOWN .

WARNING:

- ANY OTHER SERVICING SHOULD BE PERFORMED BY AN AUTHORIZED SERVICE REPRESENTATIVE .
- THE HEATER MUST NOT BE LOCATED IMMEDIATELY BELOW A SOCKET-OUTLET
- IN ORDER TO AVOID A HAZARD FOR VERY YOUNG CHILDREN,THIS APPLIANCE SHOULD BE INSTALLED SO THAT THE LOWEST HEATED RAIL IS AT LEAST 600 MM ABOVE THE FLOOR.
- THE TOWEL RAIL IS TO BE INSTALLED SO THAT SWITCHES AND OTHER CONTROLS CANNOT BE TOUCHED BY A PERSON IN THE BATH OR SHOWER.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge, if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

SPECIFICATION

Voltage: AC220-240V

Frequency:50Hz

Rated power: 150W

Unit size: Wall mounted: 530x100x930mm

Free standing: 530x355x975mm