

DEVANTI

**USER MANUAL
VAC-CL-09E**



TECHNICAL DATA

Description:	Handheld Vacuum Cleaner
Model:	P009E
Battery Charger	
Input:	100-240V ~50/60Hz 0.2A
Output:	DC 26V  0.4A 
Battery:	22.2V 2000mAh
Product Rating:	150W

DOCUMENTATION

We declare that this product conforms to the following product legislation in accordance with the following directive(s):

2014/30/EU	Electromagnetic Compatibility Directive.
2014/35/EU	Low Voltage Directive.
2011/65/EU	Restriction of Hazardous Substances Directive.

RKW Quality Assurance, United Kingdom

WARRANTY

This product is guaranteed for 12 months from the date of original purchase. If any defect arises due to faulty materials or workmanship, the faulty products must be returned to the place of purchase. Refund or replacement is at the discretion of the retailer.

The following conditions apply:

- The product must be returned to the retailer with proof of purchase.
- The product must be installed and used in accordance with the instructions contained in this instruction guide.
- It must be used only for domestic purposes.
- It does not cover wear and tear, damage, misuse or consumable parts.
- RKW has limited liability for incidental or consequential loss or damage.
- This guarantee is only Valid in the UK and Eire Only.

An extended warranty is available for this appliance.

See back page for details.

PRODUCT SAFETY

When using any electrical appliance, basic safety precautions should always be followed including the following:

- Check that the voltage of the main circuit corresponds with the rating of the appliance before operating.
- If the supply cord or appliance is damaged, stop using the appliance immediately and seek advice from the manufacturer, its service agent or a similarly qualified person.
- Do not let the cord hang over the edge of a table or counter or let it come into contact with any hot surfaces.
- Do not carry the appliance by the power cord.
- Do not use any extension cord with this appliance.
- Do not pull the plug out by the cord as this may damage the plug and/or the cable.
- Switch off at the wall socket then remove the plug from the socket when not in use or before cleaning.
- Switch off and unplug before fitting or removing tools/ attachments, after use and before cleaning.
- Close supervision is necessary when any appliance is used by or near children.
- Children should not play with the appliance.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Cleaning and user maintenance should not be undertaken by children without supervision.
- Take care when any appliance is used near pets.
- Do not use this product for anything other than its intended use.
- Do not immerse cords, plugs or any part of the appliance in water or any other liquid.
- This appliance is for household use only.
- Do not use the appliance outdoors.
- Use extra care when cleaning on stairs.
- Do not immerse cord, plug or machine in water or any other liquid.

- Keep hair, loose clothing, fingers, feet and all parts of body away from moving parts.
- Do not close doors on the cord or move the vacuum by pulling the cord around sharp edges or corners.
- Unplug cleaner when not in use.
- Turn all controls off before unplugging from mains.
- Use only original accessories.
- Do not vacuum liquids, sharp objects like nails or drawing pins.
- In the unlikely event the appliance develops a fault, stop using it immediately and seek advice from the service department.



WHAT' S IN THE BOX

Instruction Manual

Rechargeable battery

Charging Station

Charging Adaptor

1. Suction Pipe
2. Release Button
3. Power Button
4. Handle
5. Charging Socket
6. Rechargeable Battery
7. Dust Cup Cover
8. Dust Cup
9. Filter System



BEFORE YOUR FIRST USE:

1. Remove the product from the box.
2. Remove any packaging from the product.
3. Please retain all packaging until you have checked and counted all the parts and the contents against the parts list.
4. Charge the rechargeable battery.





Dispose of the packaging in a responsible manner.


USING YOUR APPLIANCE

Accessories

1. Assemble the nozzle and tube.
2. Pull out the mains cable to its full length and plug into the mains supply.
3. Switch on by pressing the On/Off switch button.
4. Your appliance is now ready for normal use.

Accessories

Accessory	Use
 Main Connector	Put the thicker end of the main connector into the silver suction pipe. If the connector feels loose, you may need to insert the other end. The main connector is all you need to connect to the extension pipe or any other accessories.
 Floor Brush	The floor brush can be attached to either the extension pipe or the main connector, and can be used to clean carpets and floors.
 Extension Pipe	There is one extension pipe included. The floor glider can directly attach to the extension pipe. To attach the other accessories, first attach the main connector to the extension pipe.
 Crevice Tool	The crevice tool can be connected to the extension pipe or the main connector, and can be used to clean in tight areas, such as corners and under units.

 Dusting brush	The Rechargeable Handy Vacuum comes with a dusting brush. The dusting brush can be attached to the main connector of the extension pipe, and used to clean window blinds, lampshades, mirrors and other areas that require delicate cleaning.
--	---

CHARGING

A full charge takes approximately 4.5 hours.

1. To charge the vacuum, remove the rechargeable battery from the bottom of the vacuum.
2. To remove the battery, push the battery lock button in, and pull.
3. Fit the battery onto the charging station.
4. Connect the charging adaptor cable to the charging station, and then plug in at the mains.
5. When the charger is plugged in, both indicator lights on the charging station will illuminate.
6. When the battery is fully charged, the red indicator light will go out.

7. Switch off at the mains and unplug. Remove the charging adaptor from the charging station, and then remove the battery.
8. Attach the battery to the bottom of the vacuum,

ATTACHING THE TOOLS TO THE MAIN BODY

1. Push the main connector into the suction pipe opening or connect the extension pipe.
2. Push the required tool into the other end of the main connector.
3. When using the extension pipe ensure the end attachment is fitted securely. When connecting the extension pipe to the suction pipe, or the floor brush, ensure all tabs are aligned.

POWER BUTTON

1. Once the required accessories have been attached, the vacuum is ready for use.
2. The power button is located on the bottom of the handle.
3. Push and hold the power button to use.

CLEANING AND CARE

CLEANING THE DUST CUP & FILTERS

In order to achieve the best performance, empty the dust cup container and clean the dust cup filter after each use.

1. Turn off the vacuum cleaner and remove the charging cable.
2. Hold the vacuum over the bin or bin bag. With one hand holding the handle, unclip the dust cup cover to open.
3. The dust cup cover will pop open and the dust and debris will empty into the bin.
4. To remove the filters, turn the filter handle anti-clockwise.
5. Remove the inner filter from the outer filter and rinse both in warm water and then let air dry for 24 hours before re-assembling.
6. Ensure you remove all dust and debris from both filters. A soft bristled brush can be used to remove any blocked dirt from the outer filter.
7. Re-assemble when completely dry.



WARNING:
DO NOT IMMERSE ANY PART OF THE
APPLIANCE IN WATER

TROUBLESHOOTING

Problem	Possible Solution
Vacuum will not work	The vacuum may have run out of charge. Charge fully.
Vacuum will not pick-up or suction power is weak	The dust cup container may be full, or the filters may require cleaning. Empty the dust cup container and clean the filters.
Dust is escaping from the vacuum	The filter may not be installed correctly, or the dust cup container may be full. Empty the dust cup container and reassemble the filter system.