 


# DEVANTI

Live life better.

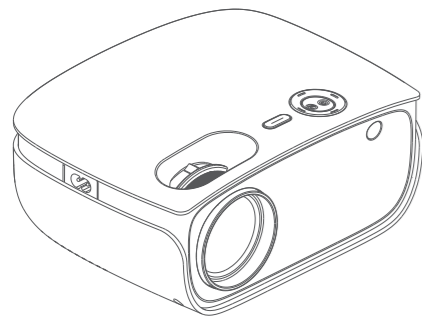

## Video Projector

### 1. Important Safeguards

- I. Please read the manual carefully before operating projector. To ensure stable power supply, please use standard power cord.
- II. Please use the power supply and cable indicated on the rating label. The projector should be kept away from cloths, sofas and anything that may block the ventilation scoop. Please keep the unit away from flammable and explosive materials.
- III. Please do not disassemble the unit yourself as this will invalidate the warranty service. To protect your eyes, do not stare directly at the lens when the projector is on. The projector must be kept away from water and any other liquids.
- IV. To prevent electric shock, please keep the projector out of the rain and away from moisture. It is recommended to switch off the projector after it has run for 6 hours non-stop. Please use the original foam and other cushioning materials when transporting the projector.
- V. If the projector does not work, please contact the authorized service agent.

### 2. Accessories List

AV signal cable	1pc
Remote control	1pc
Power cable	1pc
User manual	1pc

### 3. Specification

<b>Model:</b>	Mini projector
<b>Lamp:</b>	LED
<b>Image system:</b>	LCD
<b>Language:</b>	English, Japanese, Chinese etc
<b>Input voltage:</b>	AC100V-240V
<b>Projection mode:</b>	Front or rear
<b>Working temp:</b>	0-35 C
<b>Operation mode:</b>	Manual / Remote control
<b>Output port:</b>	Headphone
<b>Input port:</b>	HDMI / USB / AV

 
### 4. Multimedia Supported Files

Audio Format	MP3, AAC, WAV, FLAC, DTS, WMA, M4A, OGG
Image Format	JPG, JPEG, BMP, PNG
Video Format	MP4, MKV, WMV, RMVB, RM, AVI, FLV, TRP, VOB, 3GP, DIVX, TP, TS, MPG, DAT
File Format	TXT




The projector does not support Dolby audio decoding.

### 5. Structural Diagram

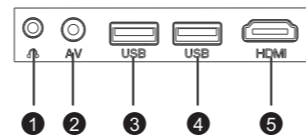


- 1. Headphone port for audio output
- 2. AV port for normal signal input
- 3. USB port for multimedia play
- 4. USB port for multimedia play
- 5. HDMI port for HDMI signal input

### 6. Panel Functions

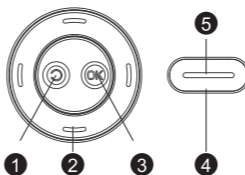 

- 1. Return
- 2. Arrow keys
- 3. OK key
- 4. Power Button
- 5. Power Indicator:  
Standby: red  
Power on: blue

### 7. Function Operation

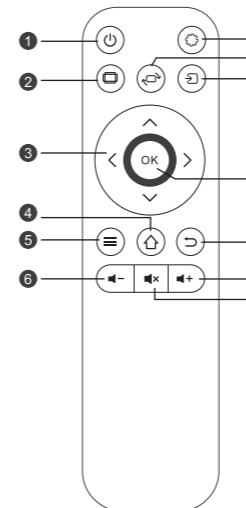 


- 1. Power
- 2. Aspect ratio
- 3. Arrow keys
- 4. Home
- 5. Menu
- 6. Volume Down
- 7. Setting
- 8. Screen flip
- 9. Source
- 10. Enter
- 11. Return
- 12. Volume Up
- 13. Mute

### 8. Power on/off



 Connect the power cord to the projector and connect the power cord to the outlet before the power is turned on.  
**Once the projector is plugged in, it will be in Standby mode.**  
**Power on:** Press the power button on the remote control once, the power indicator will turn blue and steady, you can turn on the projector.  
**Power off:** Press the power button on the remote control twice, the power indicator changes from blue to steady red, turn off the projector.

### 9. Focus/Keystone

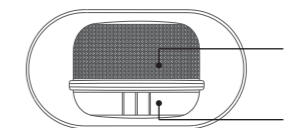


Some projectors focus by rotating the lens, and the trapezoidal correction is located on the back of the machine.

#### I. Focusing

 Place the projector lens perpendicularly to the projection screen or curtain wall, and adjust the focus dial until the image is clear, that means the image focusing is finished.

### II. Keystone Correction

Please adjust the "Keystone Correction" dial ring until the image is displayed normally.  
Note: The projector has only vertical keystone correction and no horizontal correction.  
Make sure your projector is level with the projected image.



### 10. Standard Setting

Please refer to the following table to adjust your picture size and distance. (From the lens to the screen).

Aspect ratio	16:9
Picture size (inch)	Projection distance (m)
50	1.55
70	2.17
100	3.10
120	3.72

 
 
Note: The above data is for reference only, please refer to the physical measurement.

## 11. Multimedia Play

**Step1:** Insert the USB flash drive into the projector's USB interface.

**Step2:** Select "Media" and press "OK" to enter.

**Step3:** Select the file you want to play.

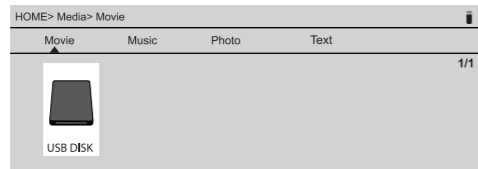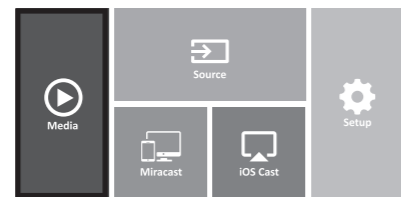

The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. in the United States and other countries.



Some projectors have different functions, depending on the object.

We offer 1 year warranty for the product.

## 12. Signal Source Settings

 
**Step1:** Press "OK" button to enter "source".

**Step2:** Make sure that the signal source you selected is consistent with the access signal source.

1. The signal sources include "HDMI" and "AV".

2. The image settings can be set as your favorite mode including "Image Mode", "Aspect Ratio", "Brightness", "Contrast", "Color" and "Sharpness".

3. The sound settings can be set as your favorite sound. Optional "Sound Mode", "Bass", "Treble", "Balance" and "Equalizer".

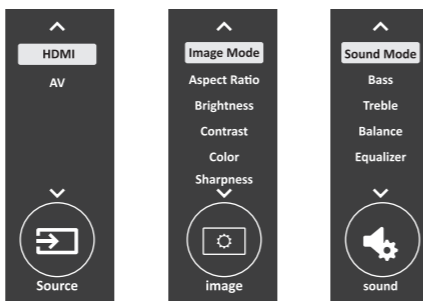



## 13. WiFi Connection

**Step1:** Choose "Setup" on the right of the interface, then find "Network".

**Step2:** Find "WiFi".

**Step3:** Choose "Scan". Select your wireless network from list and type in the password.

  **Step4:** Press the "Exit" key on the remote control and then confirm the connection.

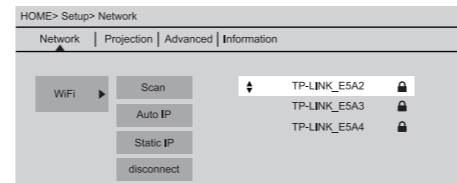
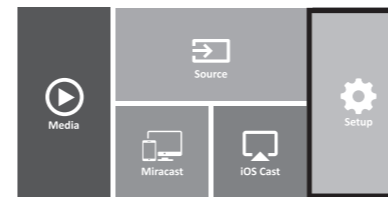


## 14. Miracast

**Step1:** Select the Miracast from the home page.

**Step2:** Open the "wireless display" function of Android device.

  **Step3:** Select the corresponding projector device name.

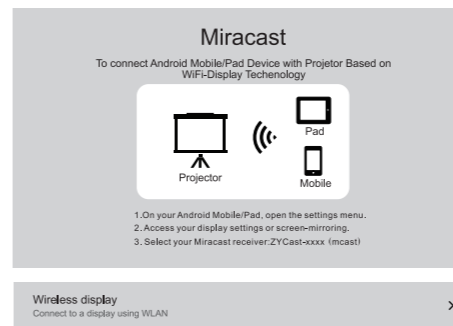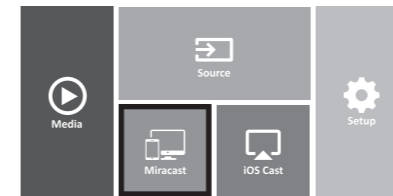

**Attention:** Note that different Android devices have different ways to open the "wireless display". For details, please refer to the instructions for Android devices.

## 15. iOS Cast

 
 
**Attention:** The projector needs to be connected to the network firstly when using the Apple Airplay for the first time or finishing the projector upgrade.

**Step1:** Select "iOS Cast" of the home page.

**Step2:** iOS devices and projectors must be connected to the same network, or connect the iOS device to the wireless network issued by the projector.

**Step3:** Open the control center of iOS device, Choose "Screen Mirroring".

**Step4:** Choose the name for projector device.

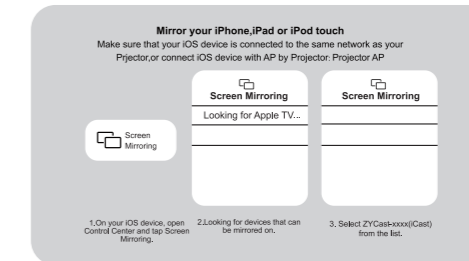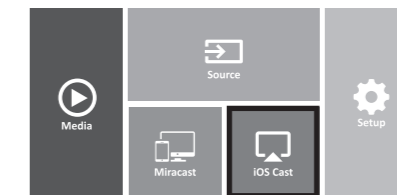

## 16. iOS Play Mode

 
**Step1:** Select "Setup" in the "HOME" interface;

**Step2:** Find "Advanced";

**Step3:** Can set the desired iOS Play Mode.

**iOS Play Mode:**

screen casting HD / screen mirroring HD / screen casting SD / screen mirroring SD

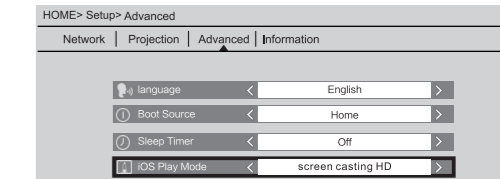


## 17. Setup

**Step1:** Select "Setup" in the "HOME" interface;

**Step2:** Find "Projection";

 **Step3:** Can set the desired projection mode.



**Network:**

Scan / Auto IP / Static IP / disconnect

**Projection:**

Mounting Mode: Front Desktop / Rear Desktop / Front Ceiling / Rear Ceiling

**Advanced:**

Language / Boot Source / Sleep Timer / iOS Play Mode / Local update / Online update / Restore Factory Default